



一、充电:1. 外接DC-5V为本机充电。

2. 太阳能充电 (太阳能板与阳光呈现45°为最佳充电。)

二, 开机/关机: 开关拨到“ON”位置为开机, 拨到“OFF”位置为关机。

三, “ I II”手电筒: 开关拨到“ I ”为1档手电筒, 拨到“ II ”为2档手电筒(手电最亮)

四, 按键操作

1, “M”

短按: 蓝牙/自拍/USB/TF/RADIO/AUX切换。

2, “/V-”

长按: 音量减。

短按: 收音模式为上一个台, MP3模式为上一首歌曲。

在自拍模式下短按“/V-”键为自拍功能 (仅适于苹果系统手机)

3, “/V+”

长按: 音量加。

短按: 收音模式为下一个台, MP3模式为下一首歌曲。

在自拍模式下短按“/V+”键为自拍功能 (仅适于安卓系统手机)

4, “/”

MP3/收音/蓝牙状态时短按为播放/暂停; 收音状态时长按为自动搜台。

通话中短按“/”键为“手机接听/蓝牙音箱接听”之间切换;

通话中长按“/”键为挂机;

蓝牙静置时长按“/”键为回拨上一个电话。

有来电时短按“/”键为接听电话, 长按为拒听;

5, “REC/DEL”

在蓝牙/AUX/FM模式下长按开始录音(显示REC), 再次长按退出录音。

在音乐模式下短按快速播放录音, 长按删除录音。

五, 自拍功能

1. 按“M”键, 从蓝牙模式转换到自拍模式;

2. 手机打开蓝牙, 搜索“shutter”, 点击连接; 连接成功会声音提示

3. 打开手机的拍照界面, 此时按“/V-”或者“/V+”按键进行拍照。

附: 安卓系统要求4.2.2以上版本, IOS要求6.0以上版本, 其它版本不支持;

手机有独立拍照按键的一般不支持。

# INSTRUCTION MANUAL

一, charge:1.External DC-5V is used to charge the machine.

2.Solar charging(solar panels and sunlight are 45.Charge for the best.

二, ON/OFF

Switch to " ON " position to turn on, dial to " OFF " position to turn off the machine.

三, “ I II”The flashlight switch to “ I ”for 1 flashlight,to “ II ”for 2 flashlight (flashlight is the brightest).

四, The Key Operation

1, “M” Short press: Bluetooth / Self- timer /USB/TF/RADIO/AUX switch.

2, “/V-”

Long press: for the volume reduction.

Short press: for a station in radio mode, MP3 mode to the previous song.

The self timer mode, short press “/V-” button for the self- timer function (only available for Windows Mobile Phones )

3, “/V+”

Long press: the volume increase.

Short press: Radio Mode for a console, MP3 mode for the next song.

In self-timer mode, short press “/V+” button for the self-timer function (only for Android )

4, “/”

MP3/ Radio / Bluetooth short press PLAY / pause status. Long press for autoscan radio;

Call, short press“/”Key for “ Bluetooth speaker phone / answer ” to switch between.

There is an incoming call, short press “/”button to answer the phone,

Long press to reject

Call in the short / long Press “/”button to hang up

Bluetooth static long Press “/”button to dial a telephone

5, “REC/DEL”

Long press start recording (show REC) in wireless, AUX/FM mode and

long press exit recording again. Short press to play the recording in music mode and long press to delete the recording

五, The Self-timer function

Press " M " key from the Bluetooth mode switch to the self-timer mode ;

Open the Bluetooth mobile phone, search for " shutter ", and click Connect ;

Open your phone's camera interface, then press“/V-”or“/V+”button to take pictures.

Attachment: Android system requires version 4.2.2 or above, IOS requires version 6.0 or above, other versions are not supported for the being. camera phones have an independent entity keys are generally not supported.